

Table of Contents

Maintenance and Records	1-1
Introduction	1-1
Preventive Maintenance Program	1-2
Preventive Maintenance Forms	1-2
Shop Work Order	1-4
Record Keeping	1-4
Frame Rails & Crossmembers	2-1
Checking Frame Alignment	2-2
Checking Procedure without Gauges	2-2
Front Axle	3-1
Description	3-1
Model and Part Identification	3-2
General Repair/Replacement	3-3
Basic Inspection	3-3
Vertical End - Play of Steer Knuckle	3-3
King Pin Bushing Inspection	3-4
Tie Rod End Inspection	3-4
Wheel Bearing Inspection	3-5
Steering Knuckle Removal	3-5
Repair Procedure	3-6
Steering Knuckle Installation	3-7
Tie Rod End - Replacement	3-8
Wheel Bearing Adjustment	3-9
Camber, Caster, and Toe-In Adjustment	3-10
Front Axle Caster	3-10

Front Axle - continued

Caster Affects	3-11
Caster Setting	3-12
Front Axle Camber	3-12
Camber Affects	3-13
Front Axle Toe-In	3-13
Toe-In Affects	3-14
Toe-In Settings	3-14
Other Factors that Affect Tire Wear	3-15
Lubrication and Torque Values	3-15
Torque Specifications Chart	3-16
Troubleshooting	3-17

Front Suspension

Front Spring Removal	4-2
Bushing Replacement	4-2
Front Spring Installation	4-3
Torque Values for Front Suspension	4-3
Quick Reference Parts List	4-4

Rear Axle

Spicer Single-Speed F170-S Maintenance Manual	
Spicer Single-Speed J190-S and J230-S Maintenance Manual	
Spicer Two-Speed Service Manual	

Rear Suspension

Spring Suspension	6-1
Rear Spring Removal	6-1
Rear Spring Installation	6-2
Checking Rear Axle Alignment	6-3
Torque Values for Rear Suspension	6-5
Rear Suspension Installation	6-5
Quick Reference Parts List	6-5
Rear Air Suspension - Neway	6-7
Pressure Protection Valve	6-7
Ride Height	6-8
Height Control Valves	6-8
Checking the HCV for Proper Operation	6-9
Height Control Adjustment Procedure	6-9
Suspension Maintenance	6-10
Air Spring Replacement	6-11
Rear Axle Alignment	6-11
Suspension Component Location & Torque Values	6-12
Transverse Beam Removal & Installation - Bushing Replacement	6-13
Equalizer Beam Bushing Replacement	6-13

Rear Suspension -continued

Troubleshooting Tips	6-16
Tires, Rims, and Wheels	7-1
General	7-1
Tires	7-2
Effects of Underinflation and Heat	7-3
Effects of Overinflation	7-3
Tire Maintenance	7-4
Tire Maintenance Summary	7-10
Safety Precautions When Servicing Tires	7-11
Wheels and Rims	7-12
Multi-piece Rims or Wheels for Tube Type Tires	7-12
Spoke Wheels with Demountable Rims	7-12
Summary	7-15
Steel Disc Wheels (Stud Piloted DCN Type)	7-15
Aluminum Forged Disc Wheels (Stud Piloted DCN Type)	7-17
Brakes	8-1
Hydraulic Brake System	8-1
Operation of the Hydro-Max Booster & Reserve Pump Motor	8-2
Electric Monitor Module	8-5
Brake Warning Light and Buzzer	8-6
Other Dash Mounted Warning Lights	8-6
Location of Key Components of the Brake Warning & Electrical System	8-7
Hydraulic System Fluid Recommendations	8-8
Troubleshooting the Hydro-Max & Brake Warning Systems	8-8
Electric Monitor Module Troubleshooting Chart	8-9
Hydro-Max & Brake Warning Systems Troubleshooting Chart ..	8-10
Service Instructions - 4-Piston Caliper	8-11
Piston, Boot, and Seal Replacement	8-12
Rotor Inspection/Service	8-13
Rotor Replacement	8-15
Air Brake System	8-16
D-2 Air Governor	8-16
PP-1 Valve	8-16
SR-1 Valve	8-16
E-6 Brake Application Valve	8-18
Stop Light Switches	8-18
LP-3 Low Pressure Switches	8-19
Double Check Valve	8-19
Safety Valve	8-19
QR-N Quick Release Valves	8-19

Brakes - continued

QR-1C Valve	8-19
Single Check Valves	8-20
Tank Drains	8-20
Accessory Air Tank and PR-2 Valve	8-20
Recommended Pneumatic System Inspections	8-21
Low Pressure Warning System	8-22
Foundation Brake System	8-25
Periodic Maintenance of Foundation Brakes	8-25
Foundation Brake Service	8-25
Brake Removal	8-26
Brake Component Inspection	8-28
Anchor Pin	8-28
Brake Drum Inspection	8-29
Brake Installation	8-30
Wheel and Drum Installation	8-31
Final Test	8-32
Spring Brake Chamber Installation	8-32
Installation of a New Chamber	8-32
Rear Service Chamber Service	8-34
Front Brake Chamber Service	8-34
Front and Rear Slack Adjusters	8-34
Slack Adjuster Removal	8-35
Slack Adjuster Installation	8-35
Testing the Slack Adjuster for Proper Operation	8-36
Cooling	9-1
Cooling Module	9-1
Recovery Bottle	9-2
Coolant Specifications	9-3
Supplemental Coolant Additives (SCA)	9-3
Cooling System Maintenance	9-5
Radiator Removal Procedure	9-6
Radiator Installation	9-8
Electric Fan Operation	9-9
Troubleshooting Guide	9-11
Miscellaneous	9-12
Winterfronts	9-13
Shutters	9-13
Power Steering	10-1
Operating Principle	10-2
Fluid Recommendations	10-3
Troubleshooting and Diagnosis	10-4

Power Steering - continued

Hydraulic System Tests	10-7
Flow and Pressure Test Procedure	10-7
Power Steering Fluid Comments	10-9
Fluid and Filter Replacement Procedure	10-9
Checking/Setting Relief Plungers	10-10
Miscellaneous Repairs to the Gear Assembly	10-11
Gear Identification	10-11
Input Shaft Cover Seal Replacement	10-11
Installation Procedure	10-13
Pitman Arm	10-13
Pitman Arm Removal Procedure	10-14
Pitman Arm Installation Procedure	10-15
Sector Shaft Seal Replacement	10-16
Steering Gear Removal	10-17
Hydraulic Pump	10-18
Troubleshooting the Hydraulic Pump	10-19
Telescopic/Tilt Steering Column	10-20
Steering Wheel Removal	10-21
Steering Wheel Installation	10-21
Turn Signal Switch Replacement	10-22
Troubleshooting Checklist	10-24
Troubleshooting Guide	10-25
Fuel	11-1
Diesel Fuel Specifications	11-1
Fuel/Water Separator	11-1
Fuel Tank	11-1
Fuel Tank Removal	11-2
Fuel Tank Installation	11-2
Fuel Solenoid and Circuits	11-2
Fuel Gauge Service	11-4
Fuel Tubing	11-4
Cummins 6BTA Engine	12-1
Engine	12-1
Engine Removal	12-2
Engine Installation	12-4
Caterpillar 3126 HEUI Engine	13-1
Electrical Control Module	13-2
Top Engine Limit	13-2
Start-Up and Emission Control	13-2
Vehicle Speed Limit	13-3
Engine Fast Idle	13-3

Caterpillar 3126 HEUI Engine - continued

Idle Shutdown Timer	13-3
Engine Water Temperature Monitoring System	13-3
The ECM System Diagnostics	13-4
Check Engine Light Operation	13-4
Retrieval of a Failure Code	13-4
Using the Cruise Control to Determine a Failure Code	13-4
Initial Start-Up	13-5
Inlet Air Heater and Lamp	13-5
Throttle Control	13-6
Other Items Related to Operating the 3126 HEUI Engine	13-7
Welding on the Chassis	13-7
Customer Specifications	13-7
Tamper Resistance	13-8
Caterpillar Hydraulic Electronic Unit Injector System	13-8
Diagnostic Flash Code/Engine Performance Relationship	13-9
Caterpillar 3126 Customer Parameter Worksheet	13-10
Higher Injection Pressures	13-11
HEUI System Components	13-11
Injector	13-13
Stages of Injection	13-14
Air Intake	14-1
Air Cleaner and Intake System	14-1
Restriction Indicator	14-2
Air Intake System Troubleshooting	14-3
Charge Air Cooler (CAC)	14-3
Charge Air Cleaning Procedure	14-4
Exhaust	15-1
Electrical	16-1
General Recommendations - Maintenance and Repair	16-6
System Protection from Short Circuits	16-8
Testing for Voltage Drop	16-9
Testing for Short to Ground	16-9
Checking Current Draw	16-10
Troubleshooting Tools	16-10
Troubleshooting Tests	16-11
Headlight Circuits	16-11
Turn Signal/Hazard Flasher	16-13
Hazard Warning	16-14
Back-Up Lamp Circuits	16-15
Stop Lamp Circuits - Air Brakes	16-15
Tail Lamp/Marker Lamp Circuits	16-16

Electrical - continued

Electric Horn Circuit	16-17
Instruments Circuits	16-17
Instrument Panel	16-18
Troubleshooting Instruments and Sending Units	16-19
Location of Sending Units	16-20
Speedometer Service, with Air Brakes	16-21
Speedometer Head Replacement	16-22
Tachometer	16-22
Low Air Pressure Warning	16-23
Air Dryer Circuit	16-24
Automatic Air Tank Drains (Optional)	16-25
Fuel/Water Separator Heater Circuit	16-25
Battery Care and Maintenance	16-27
Battery Testing and Charging Procedure	16-28
Battery Testing	16-29
Battery Charging Procedure - Group 31 Battery	16-31
Battery Jump Starting Precautions	16-32
Alternator Charging System	16-33
Testing/Troubleshooting Charging System	16-34
Rated Output Test	16-35
Alternator Removal	16-36
Alternator Installation	16-37
Starter Circuits	16-37
Engine Protection System - Standard	16-39
Kysor Engine Protection System	16-40
Clutch and Transmission	17-1
Clutch System - General	17-1
Clutch Adjustment	17-2
Clutch Adjustment Procedure	17-3
Clutch Removal	17-5
Inspection of the Clutch Assembly	17-6
Other Factors Influencing Proper Clutch Performance	17-8
Clutch Assembly Installation Procedure	17-9
Transmission Installation	17-10
Automatic Transmission	17-11
Driveline	18-1
Lubrication Requirements	18-2
Lubrication Intervals and Procedure	18-2
Driveshaft Service	18-3
Shaft Removal and U-joint Replacement	18-4
Inspection	18-4

Driveline - continued

Assembly of Full Bore Snap Ring U-joints18-5
Shaft Installation18-6
Vibration Related Problems18-6
Driveline Angularity18-7